


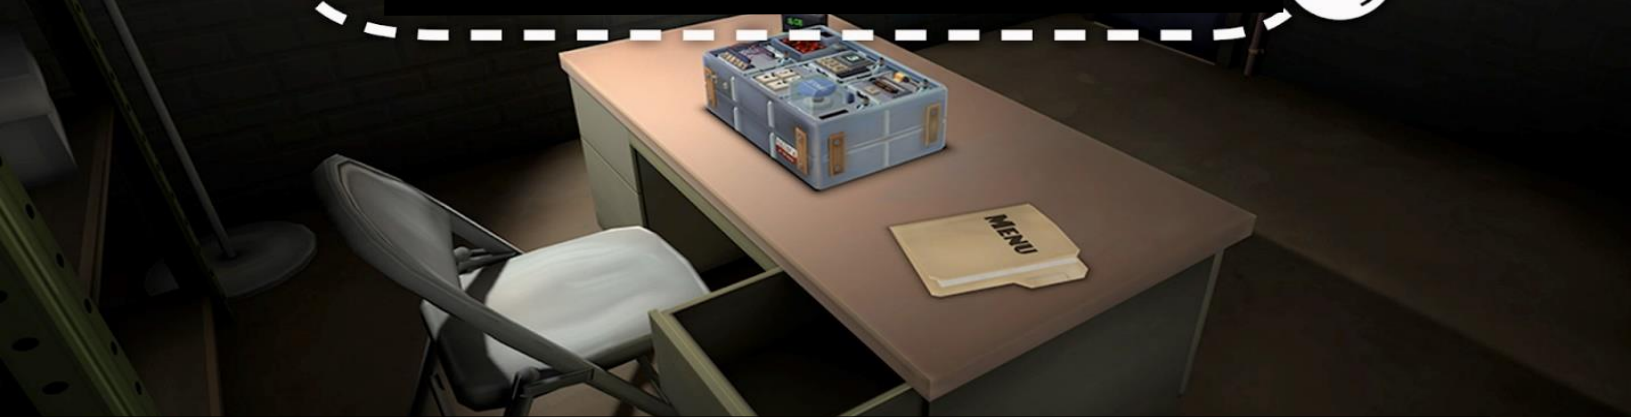

KEEP COPYING & NOBODY EXPLODES



ME 218A

- 1. Press Touch Sensor to Start.**
- 2. Watch and Learn the Displayed Pattern.**
- 3. Joystick Selects Pattern Elements in 4 Directions.**
- 4. Hold Joystick in Place and Press Touch Sensor to Enter Selected Pattern Element.**
- 5. If a Correct Element is Selected, your Score Increases.**
 - a. Select an Incorrect Element and is Game Over.**
- 6. Enter the Complete Pattern Correctly Within the Allotted Time to Advance to the Next Round.**
 - a. Let the Time Expire and is Game Over.**
- 7. Every New Round Adds a New Pattern Element.**

SCORING VALUE

- Correct Pattern Element: 10 Points**
- Scoring Value Doubles for every 4 Correct Inputs**